



HEAVY DUTY T-TOP

(MA080-4)


PARTS AND COMPONENTS

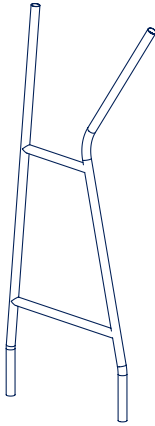


(1) Upright x 2

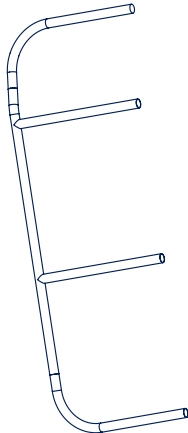

(3) Canopy Frame- L x 1

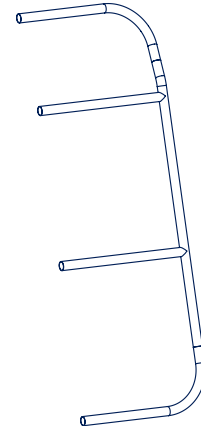

(4) Canopy Frame- R x 1

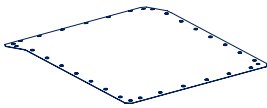

(5) Top Fabric x 1



(6) Cord x 1



(7) Tube Connector x 4



(8) Side Mount Spacer x 4




(9) Clamp Mount - Top x 8



(10) Clamp Mount - Bottom x 8



(11) Mount Wedge x 8

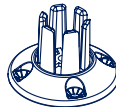

(12) Base Mount x 4



(13) Cap x 4



(14) Sleeve x 8



(15) M8 Washer x 12



(16) M8 Lock Nut x 8



(17) M8 Nut x 4



(18) M6 x M16 HEX. Socket Head Cap Screws x 32



(19) M8 x 140 Hex. Head Screw x 4



(20) M8 x 45 Hex. Head Screw x 8



(21) M8 Lock Nut x 8




(22) 8G x 16 Pan Head Screw x 4

Tools Required:


- M6 Head Allen Wrench
- M8 Socket Wrench
- 3.5mm, 9mm Drill Bit
- Phillips Head Screw Driver
- Drill

ASSEMBLY INSTRUCTIONS

STEP 1. Attach base mount to uprights (1). Tighten firmly using M8 socket wrench.

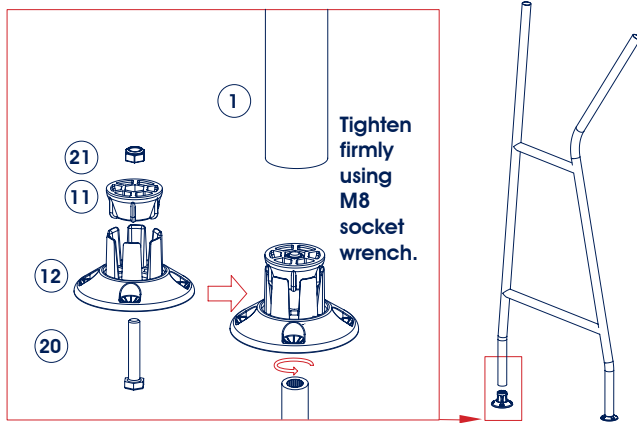


STEP 2. Attach clamp mount to uprights (1). Align at 90° to upright, tighten firmly using M8 socket wrench.

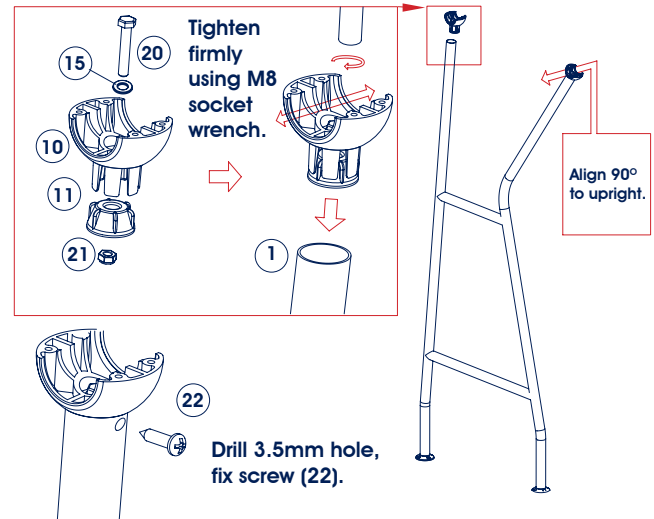


STEP 3. Assemble canopy frame.


Insert tube connector (7)

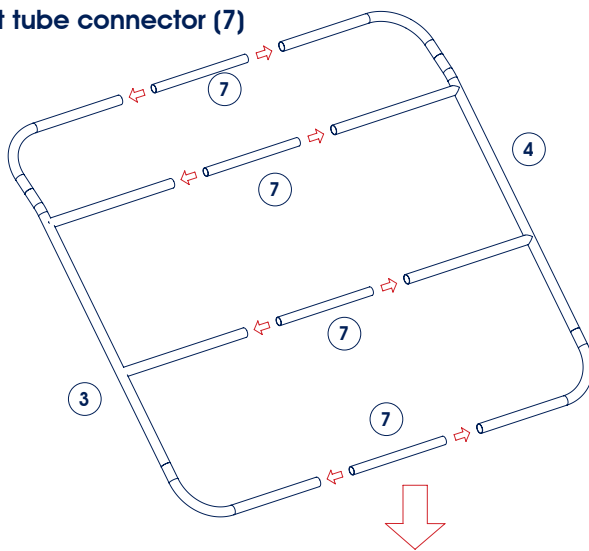

Clip sleeves (14)
onto crossbar
sections.

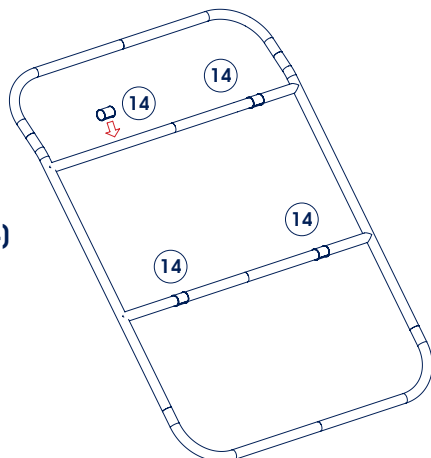


STEP 4. Attach canopy frame to uprights.

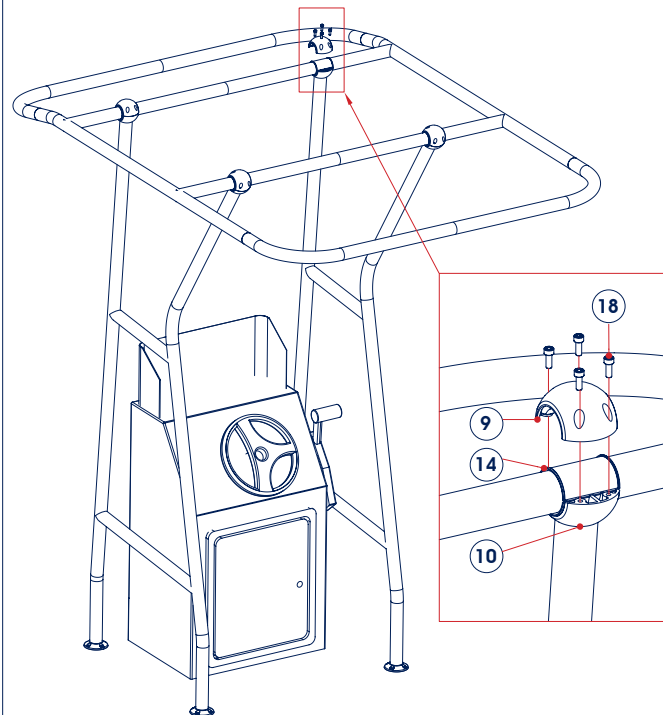


Position sleeve (14) into clamp
mount loosely fasten clamp
mounts to canopy frame
DO NOT TIGHTEN uprights
will need to slide to align
with console width.

ASSEMBLY INSTRUCTIONS

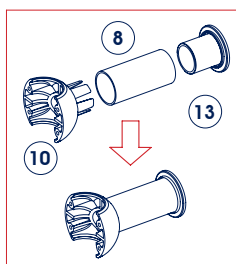
STEP 5. 1. Clip sleeves (14) onto uprights.
2. Assemble side mounts.

3. Position T-Top over console.

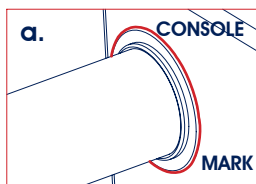

a. Mark locations of the side mounts on console, position as high as possible.

b. Mark locations of base mounts on boat floor.


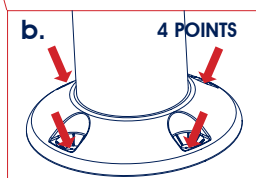
**STEP 6.**

Drill holes where marked.

a. Drill 9mm hole on the console.






b. Drill hole to suit fastener type for base mounts (see step 10).

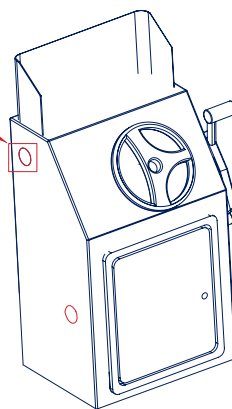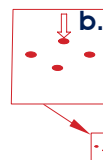

3. Secure side mounts to the console.



Side mount spacer (8) may be trimmed to suit if necessary.

Align clamp mounts with upright tube before tightening.

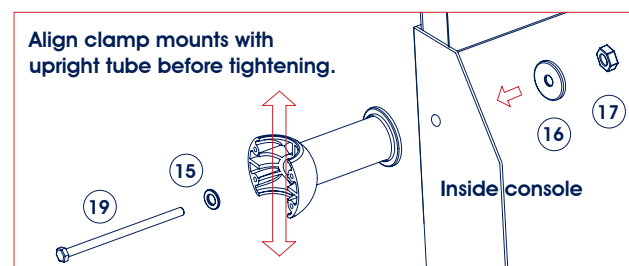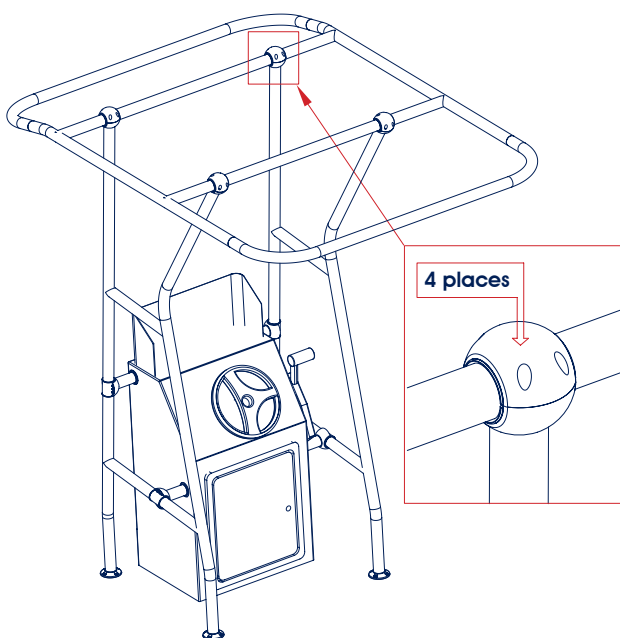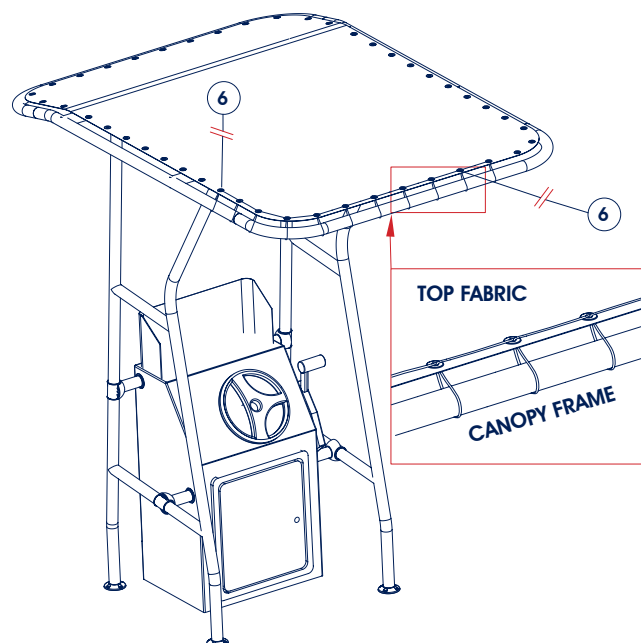**STEP 7.** Adjust canopy frame on uprights to sit centre & tighten clamps.**STEP 8.** Lace top fabric to canopy frame using cord. (6)

ASSEMBLY INSTRUCTIONS

STEP. 9. Secure side mount to uprights.

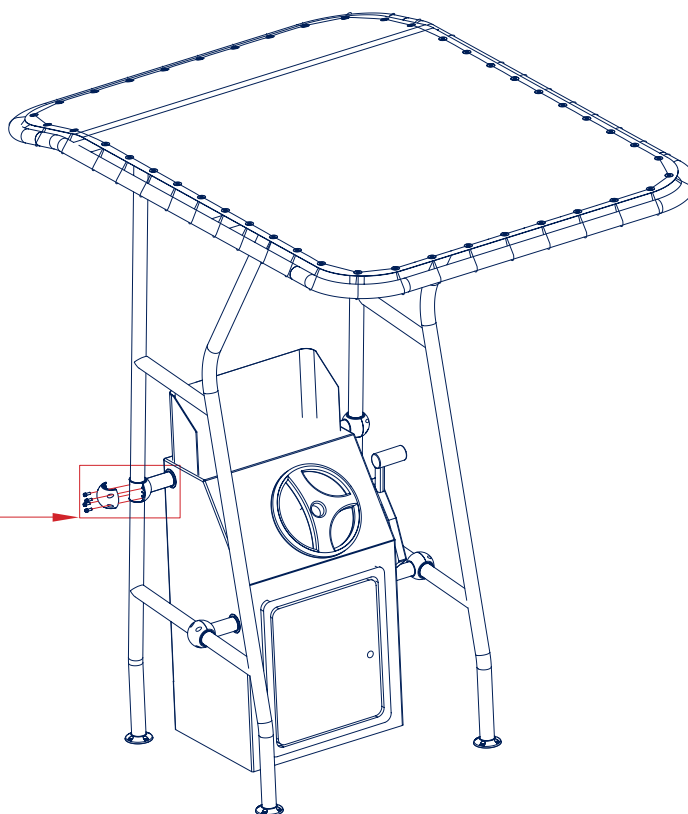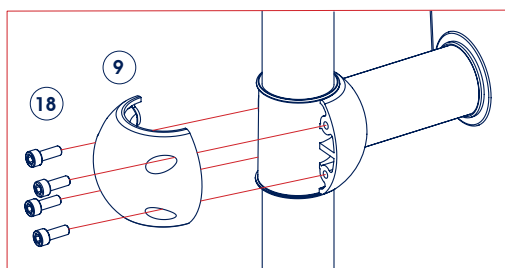

STEP. 10.

Secure base mount on the boat.

Recommend: 14g x 25mm countersink screw fastener or M6 countersink bolt with nut and washer.

