



# INSTRUCTION OF ASSEMBLING OSCULATI ELECTRIC Y-VALVE


Step 1: Loosen 3 Screws A1(M4X18) and washers to dismantle case E into 2 pieces (E1 and E2) as below:

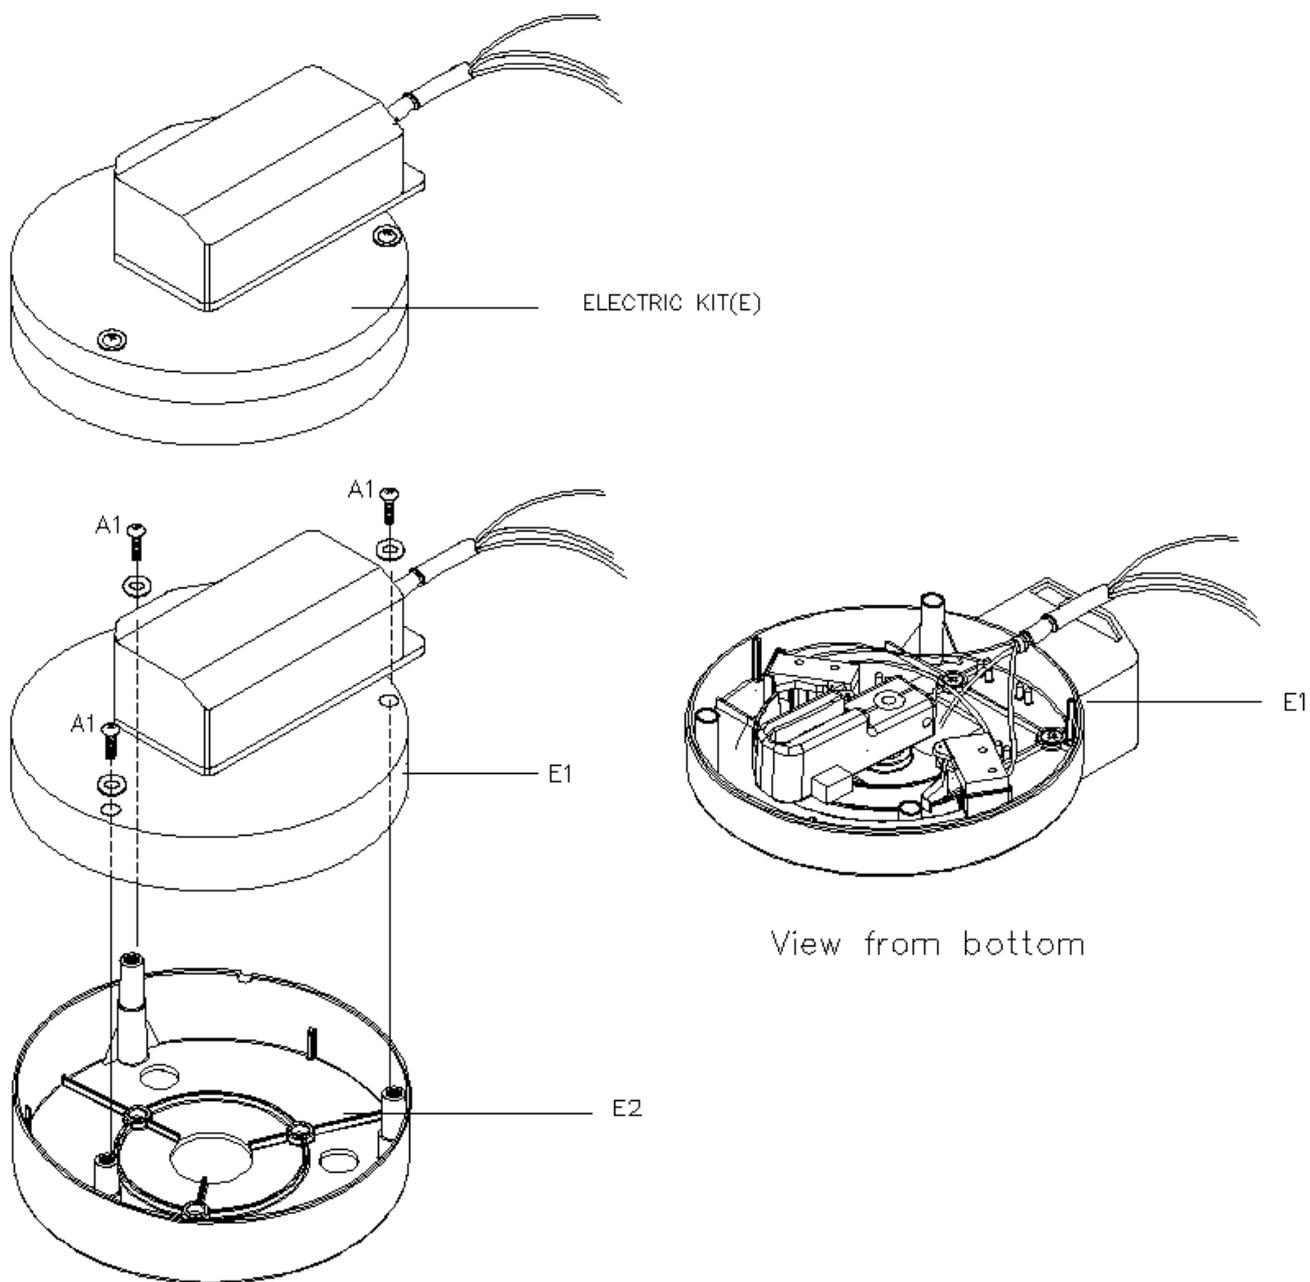


Step 2. Loosen 3 Screws A2 and Screw B1 to Prepare for electric kit assembly.

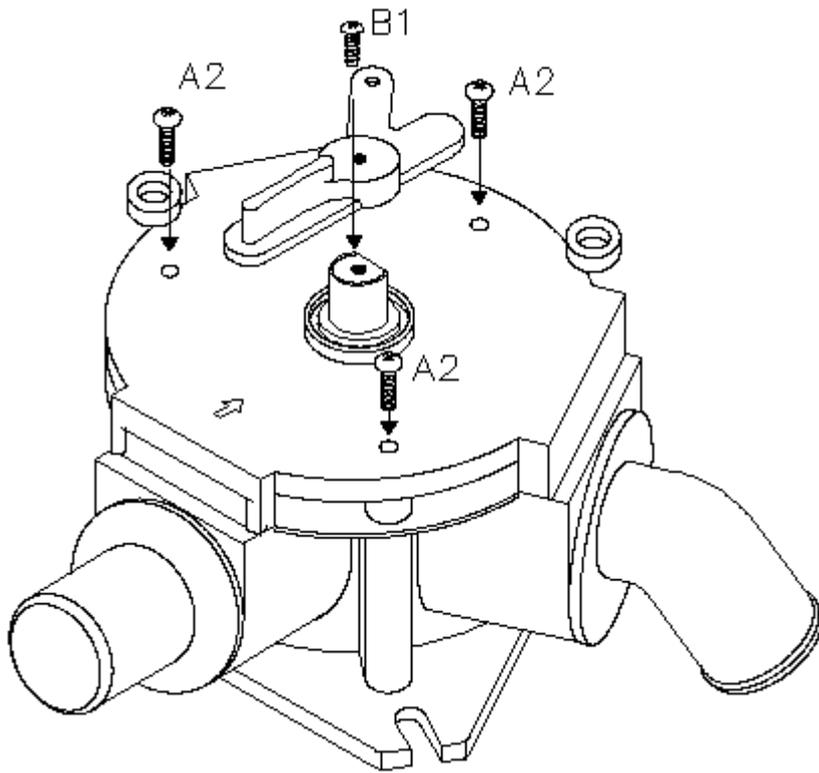


Step 3. Use TMC 3 ScrewsA3(M4X18) to assemble E2 and Y-valve body together as below

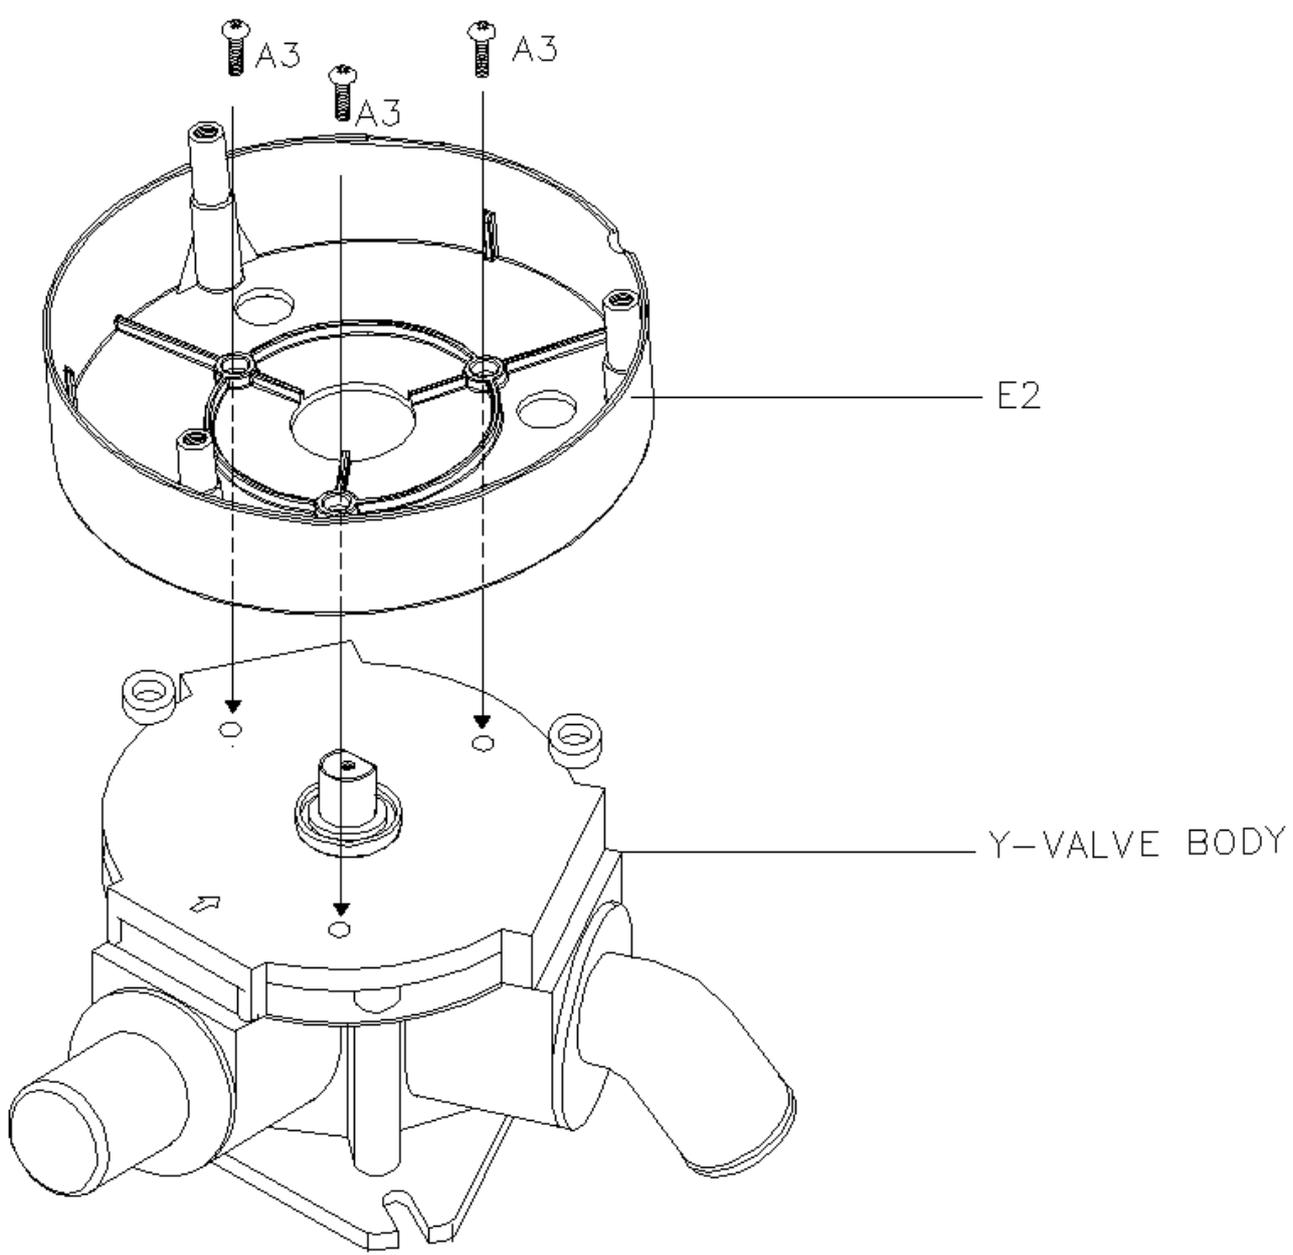


Step 4. Put B1 original Screw back to set up the hand to proper position.

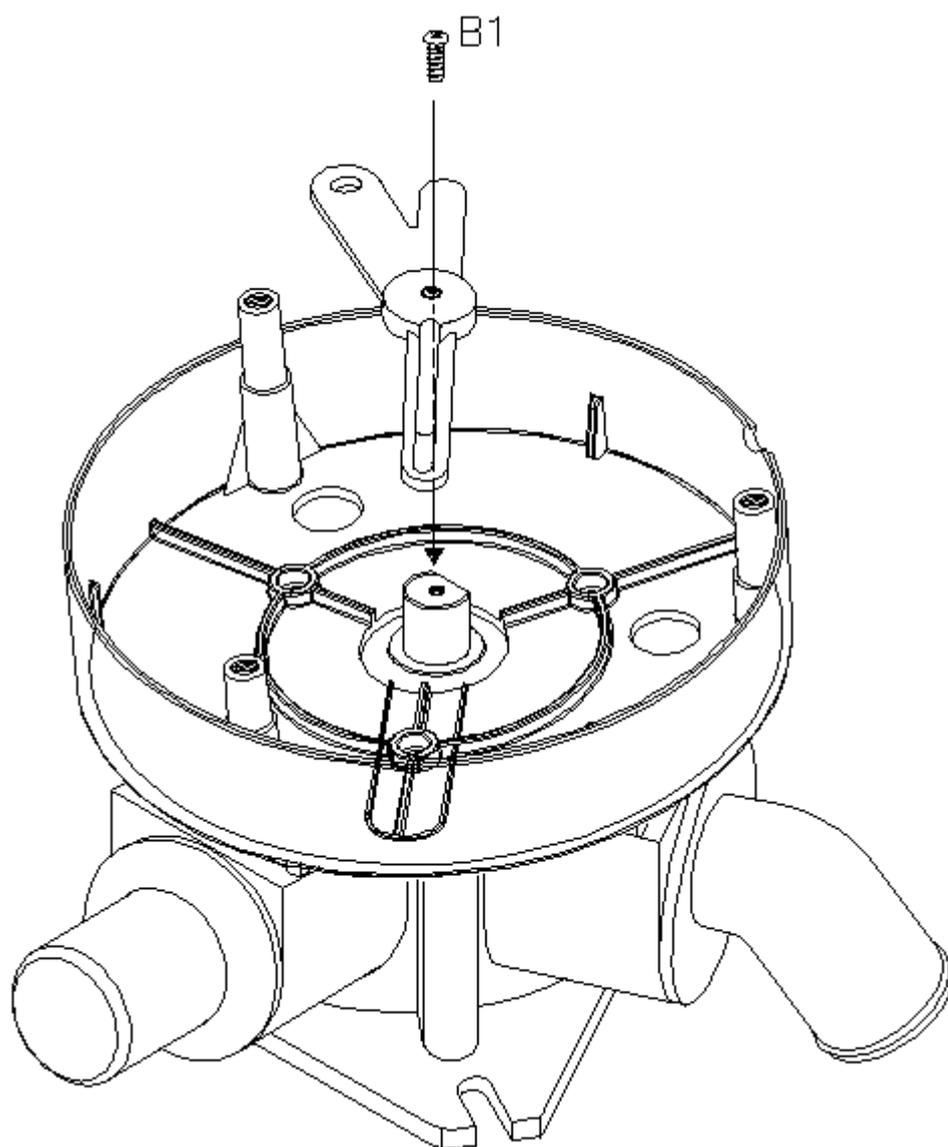


Step 5. Check carefully, the blue hand and rotary arm be in same direction before going to Step 6.

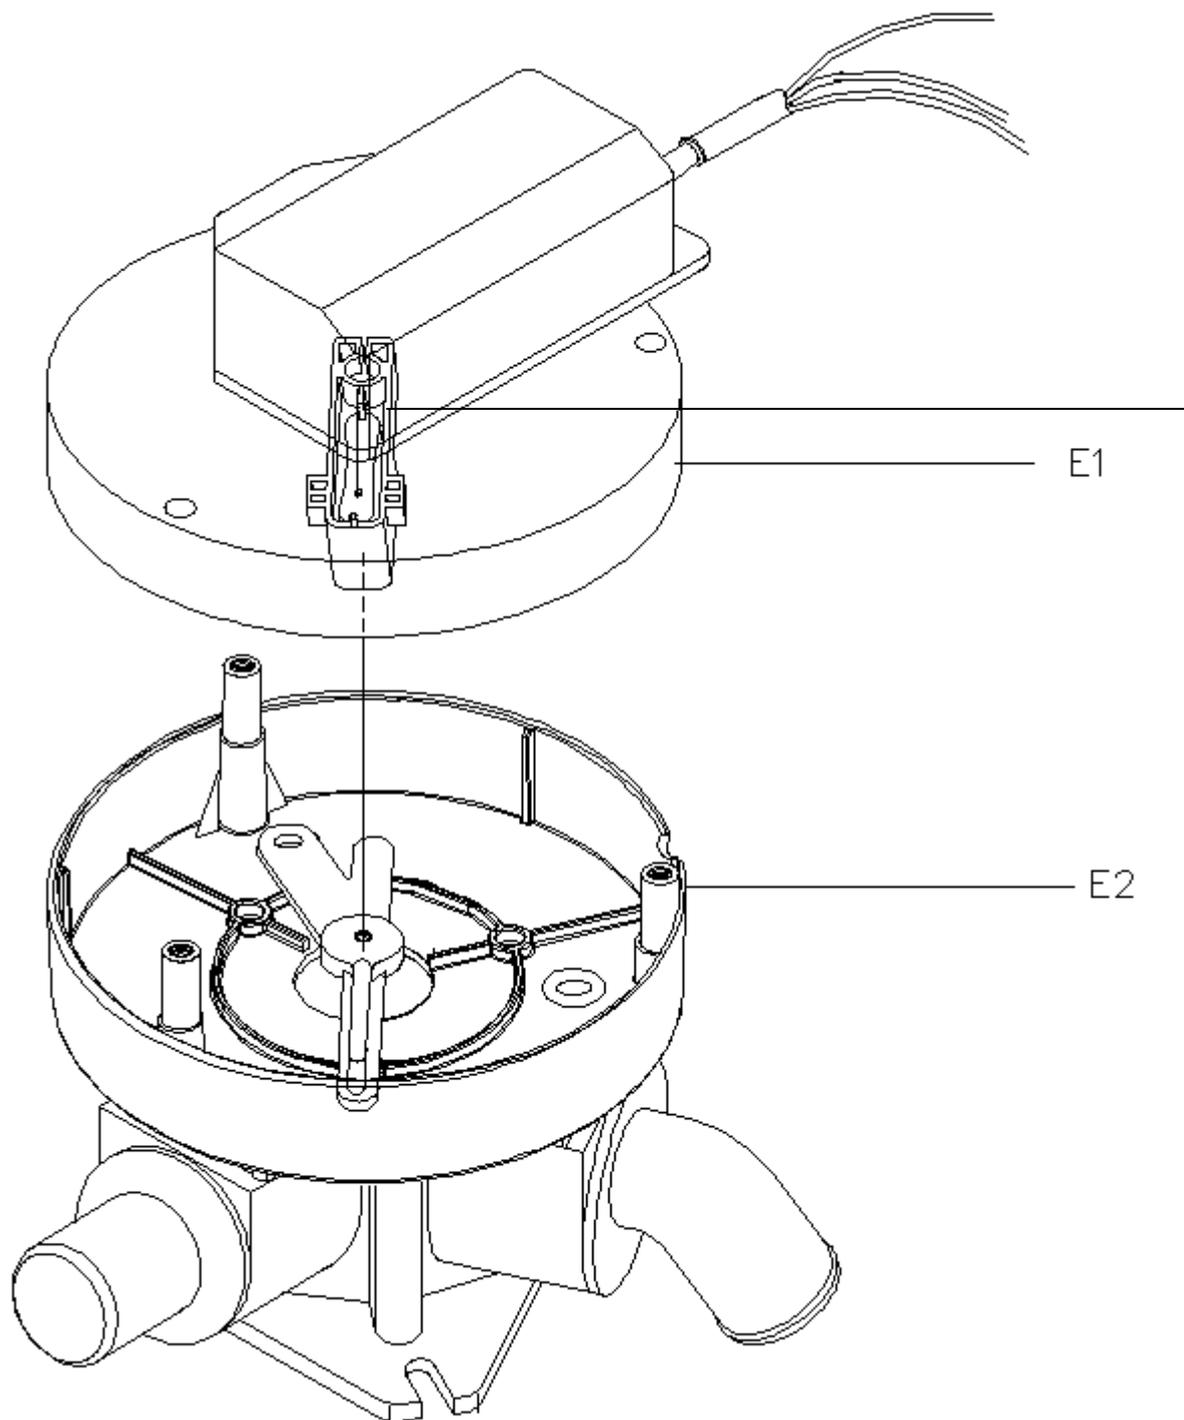

Step 5. Finally assemble E1 and E2 together with Screws A1(M4X18).

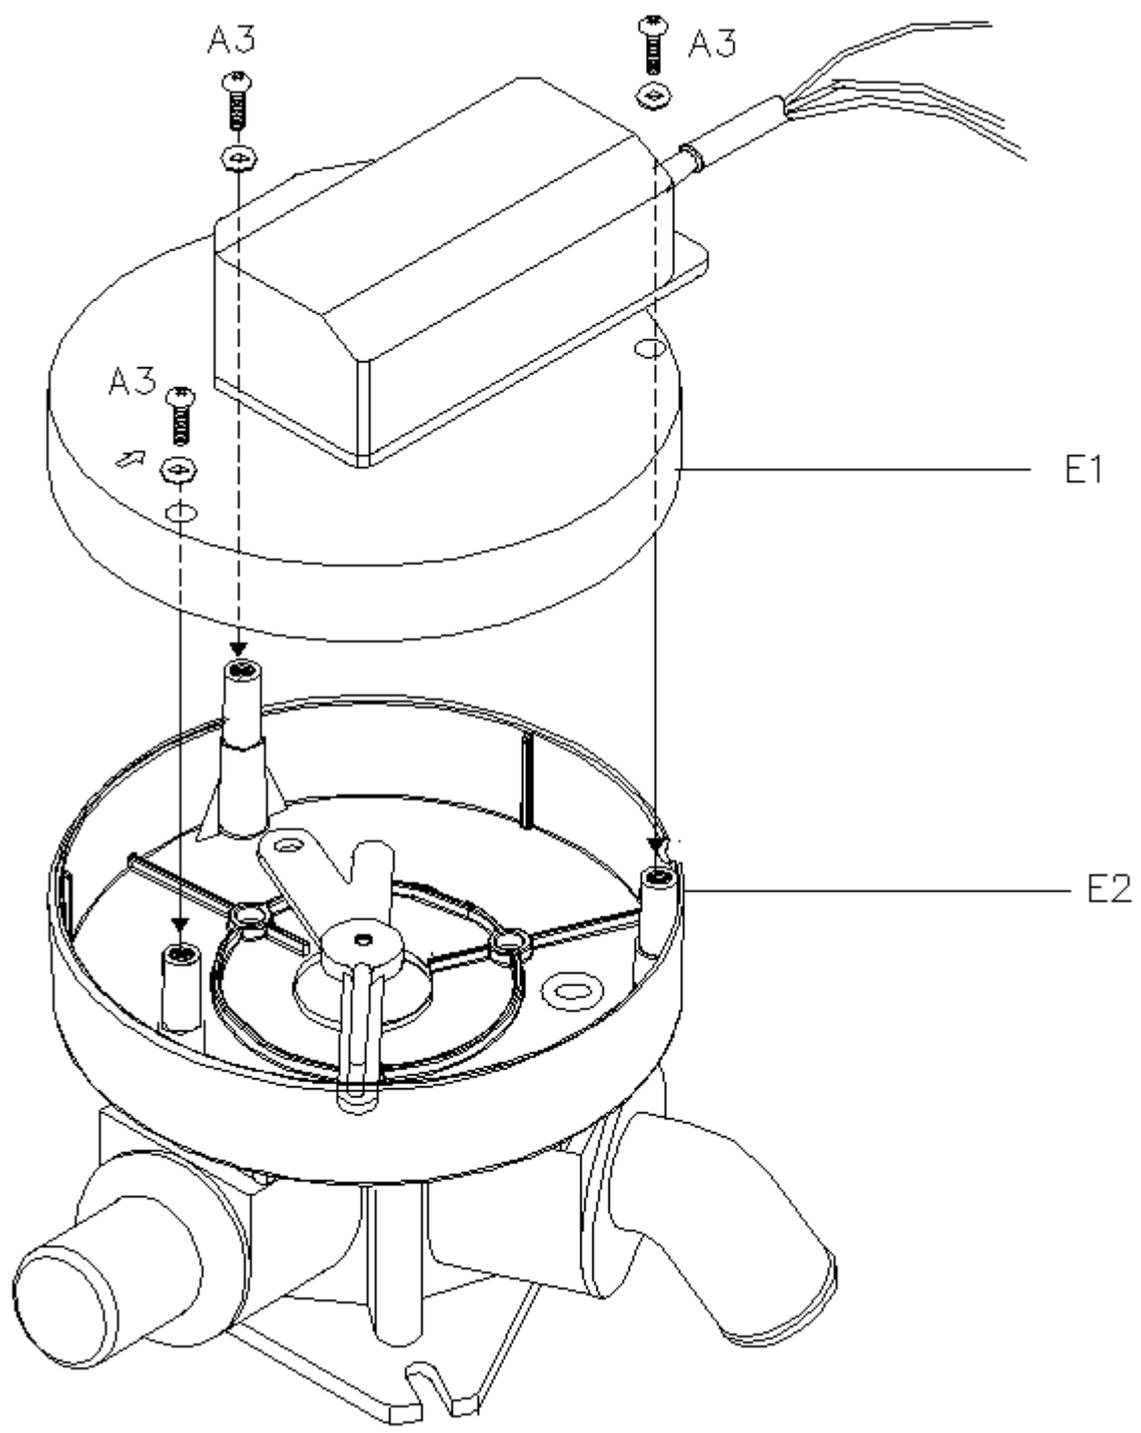

Remark 2

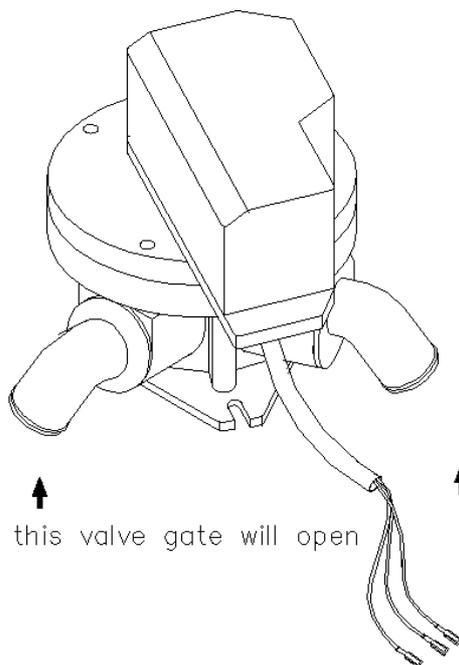

Switch to BROWN this valve gate will open

Switch to YELLOW this valve gate will open

